



# MiniRamp - M1/S


## MANUAL

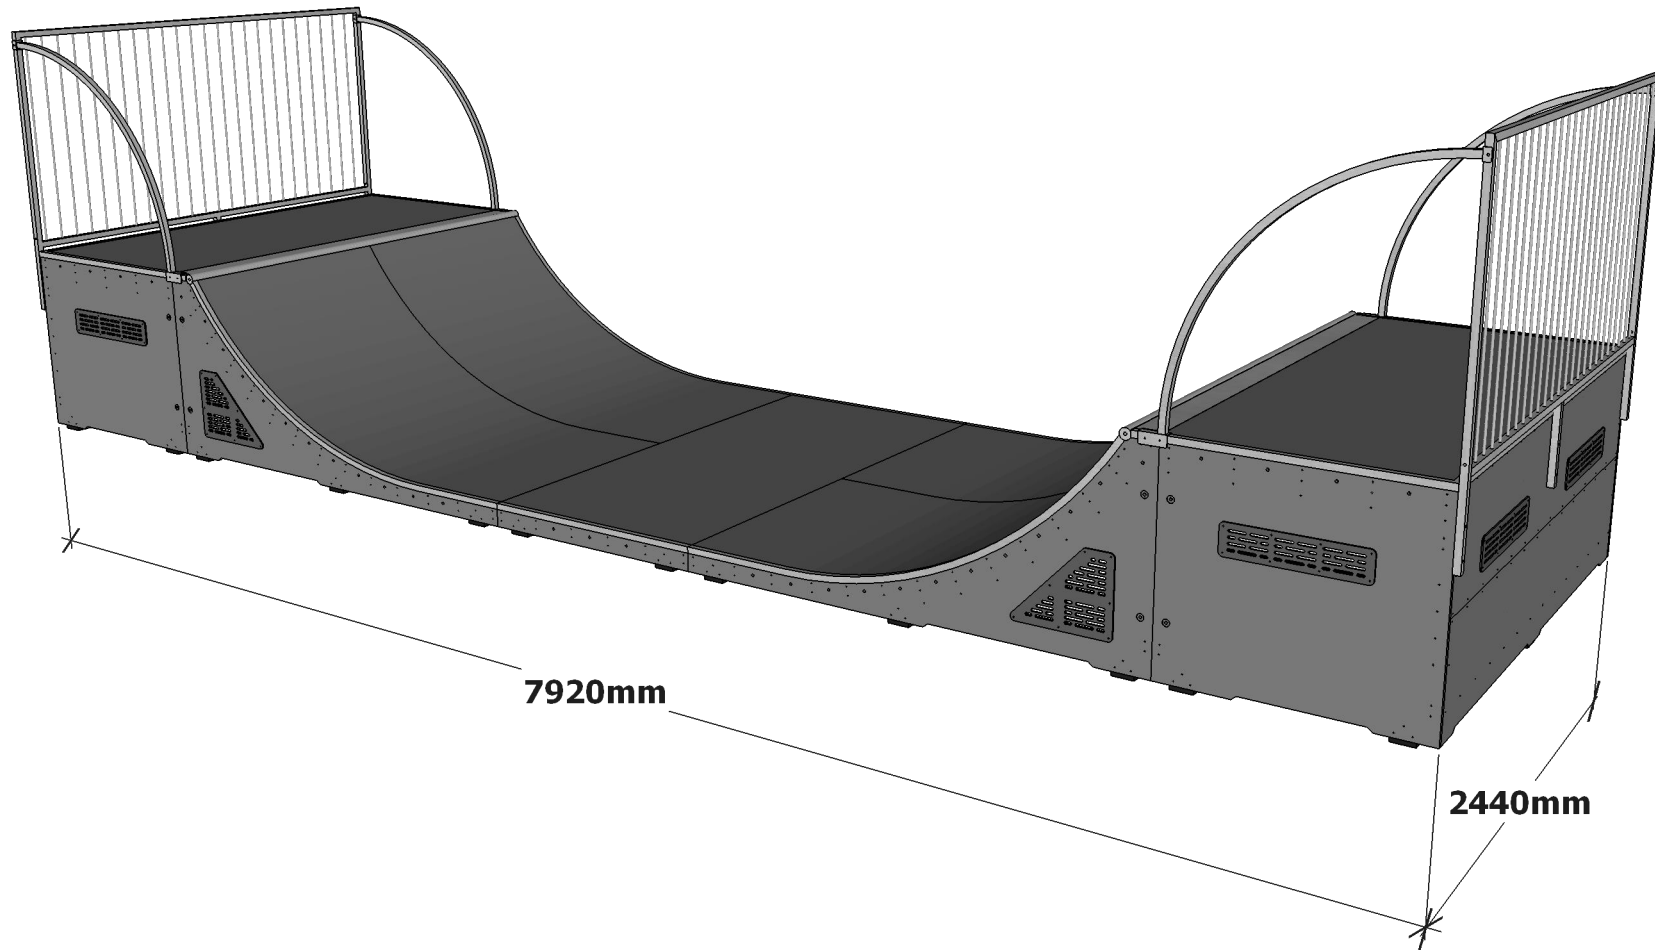


# MiniRamp - M1/S PARTS

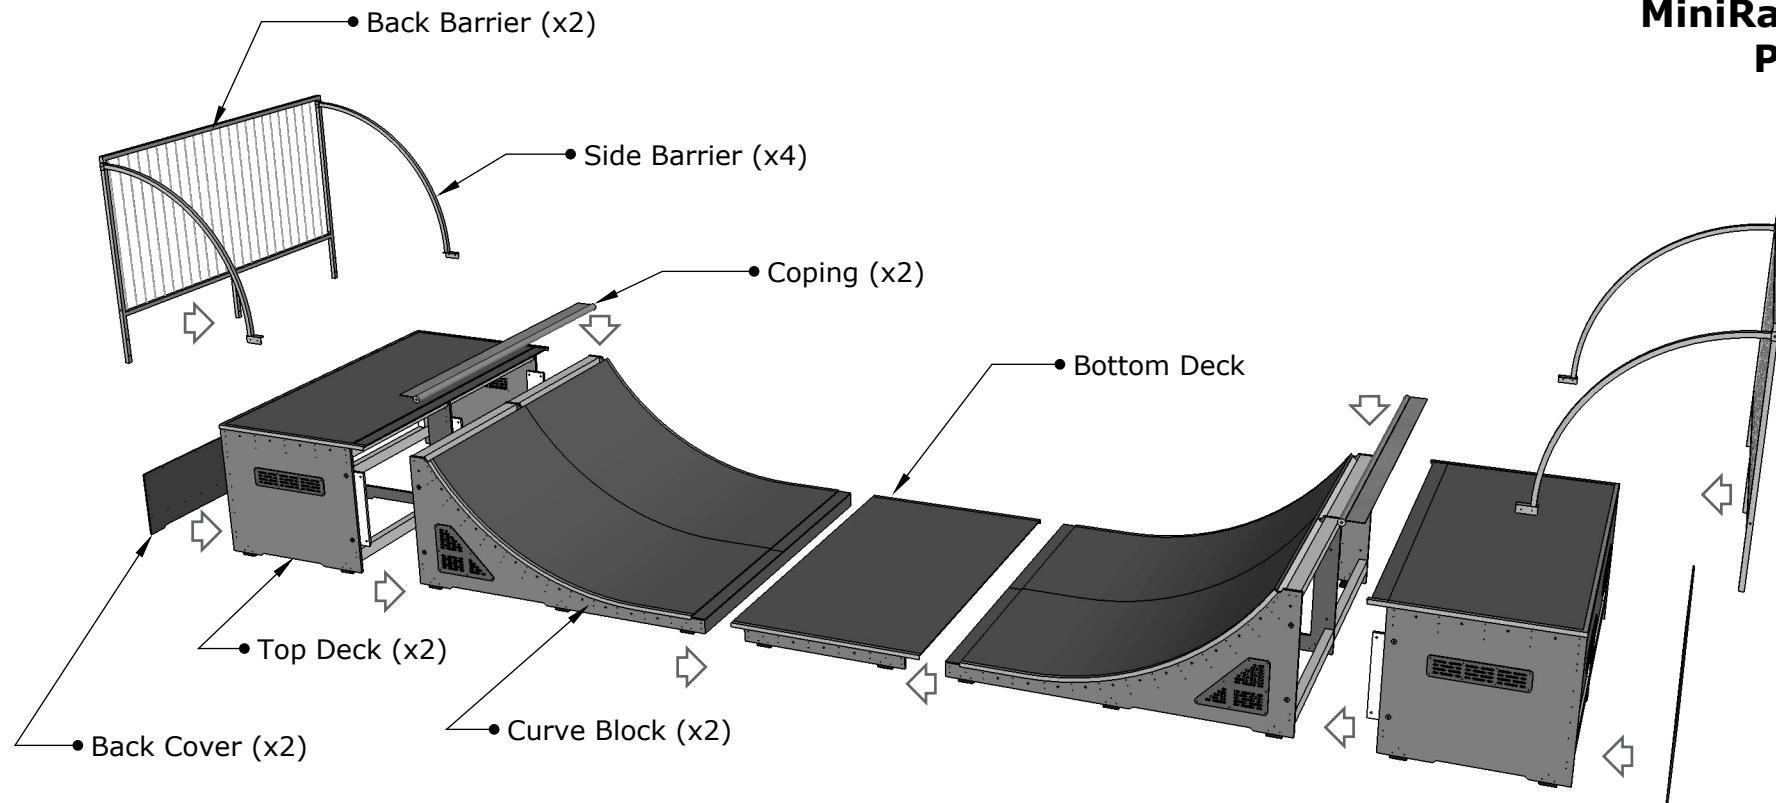

## 1. Top Deck + Curve Block

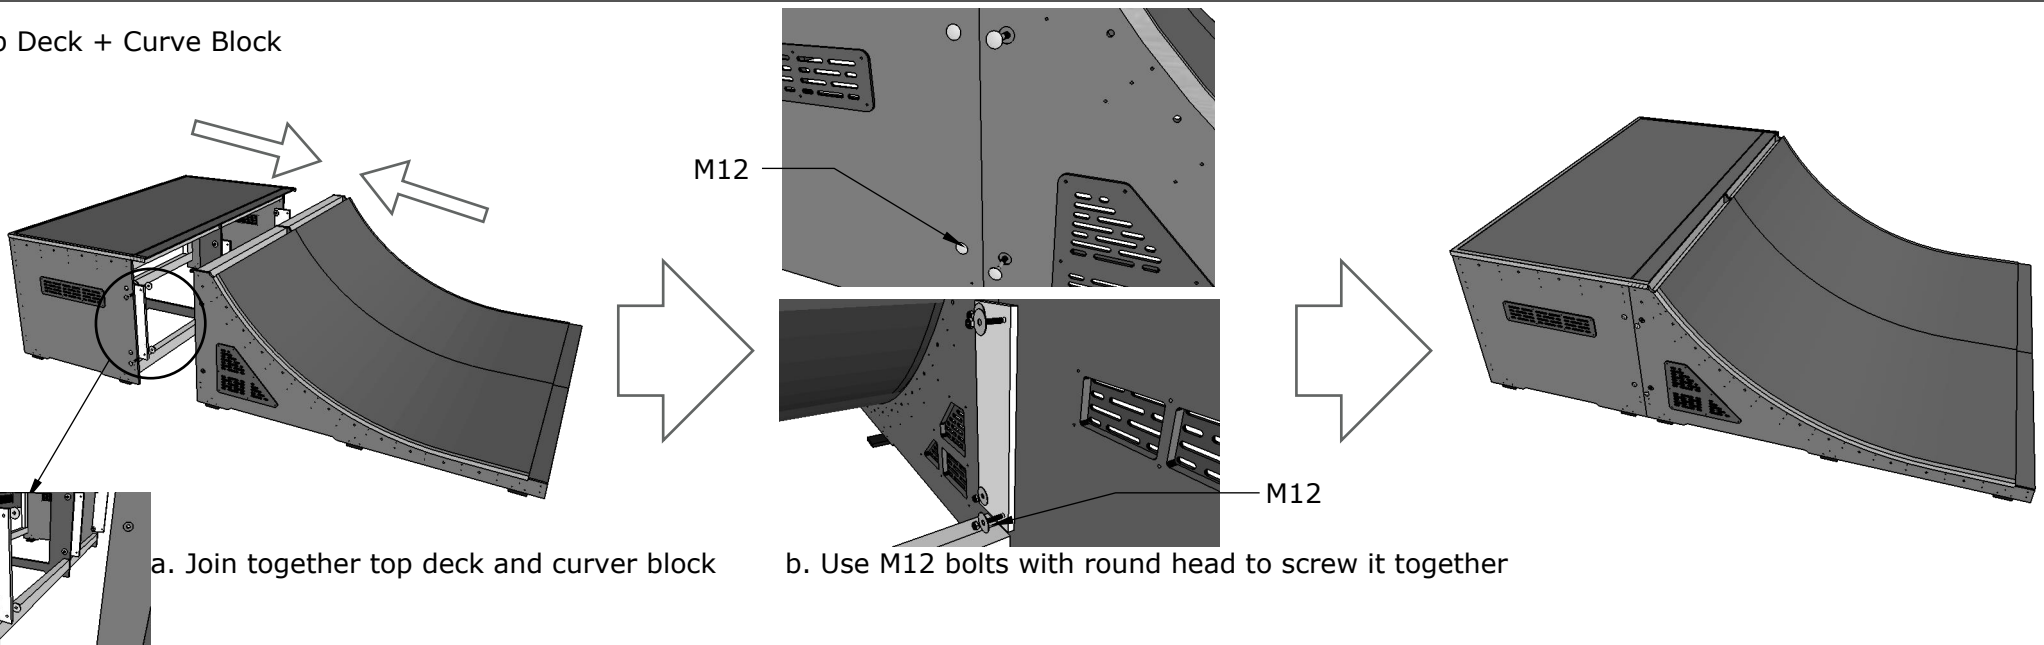


## 2. Curve Block + Bottom Deck

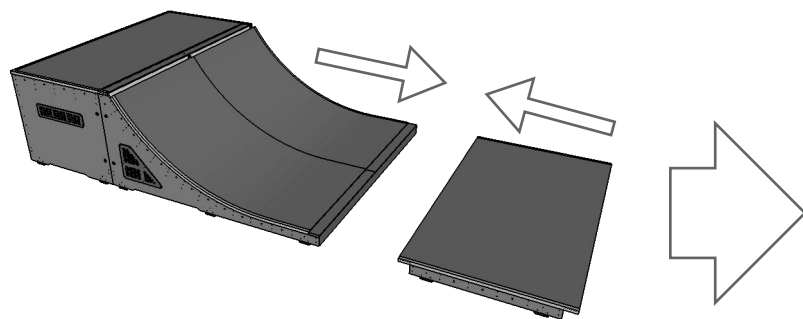


a. Connect together Bottom Deck and Curver Block.

b. To attach RampLine sheet use 6x60 Wurth screws

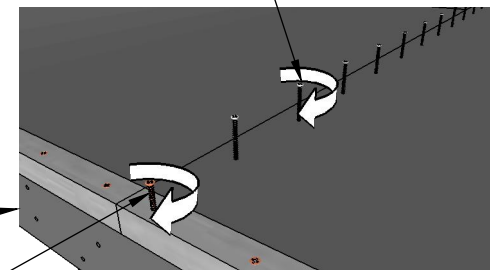


c. To attach metal angle use 6x40 SPAX screws.

## 3. Coping

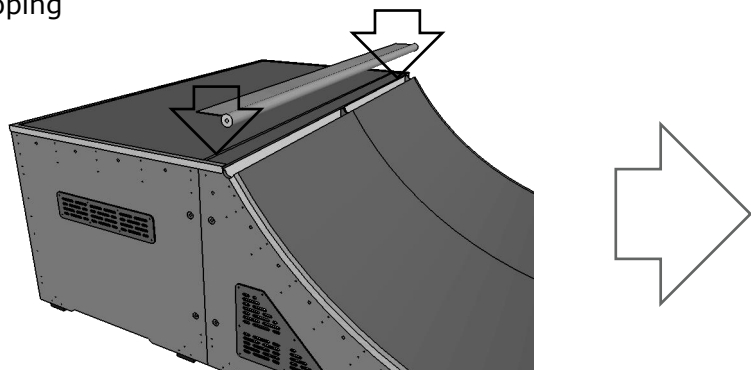


a. Put coping on top of Curve block

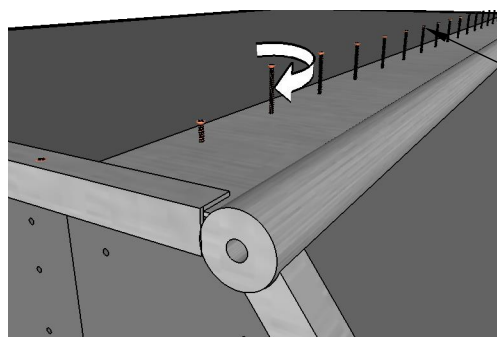


6x60 SPAX

b. Use 6x60 SPAX screws to screw coping

## 4. Back Barrier

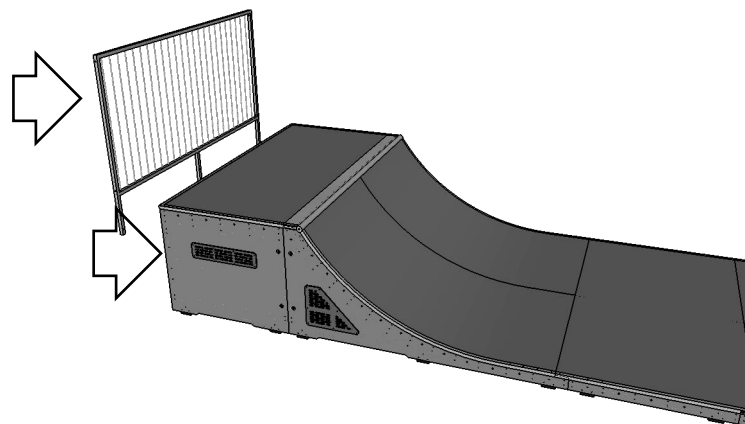


a. Mount back barrier to back of Miniramp.

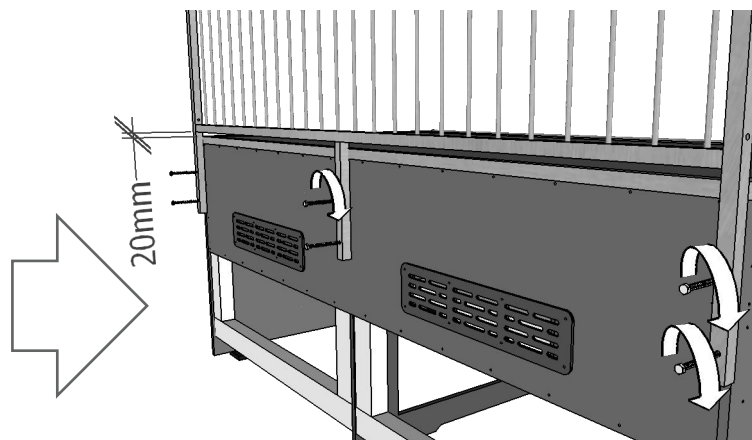


b. Slot should be around 20mm free space between top of TopDeck and the lower bar of the barrier.  
- To screw it use 10x90 with hexagonal head.


## 5. Side Panels

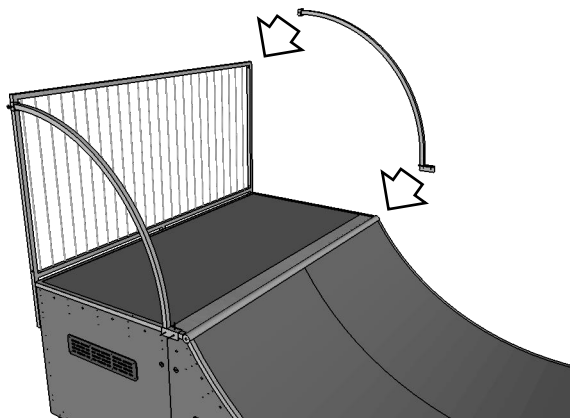

a. Mount side barrier to back barrier and top of TopDeck

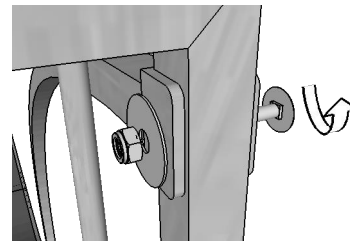


b. To screw together top parts of barriers use M8x80 bolt with round head.

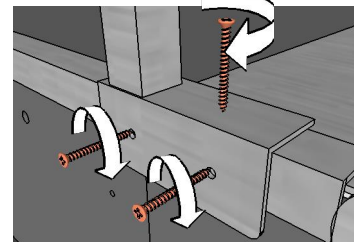

c. To screw together lower part use 6x60 Wurth

## 6. Back Cover

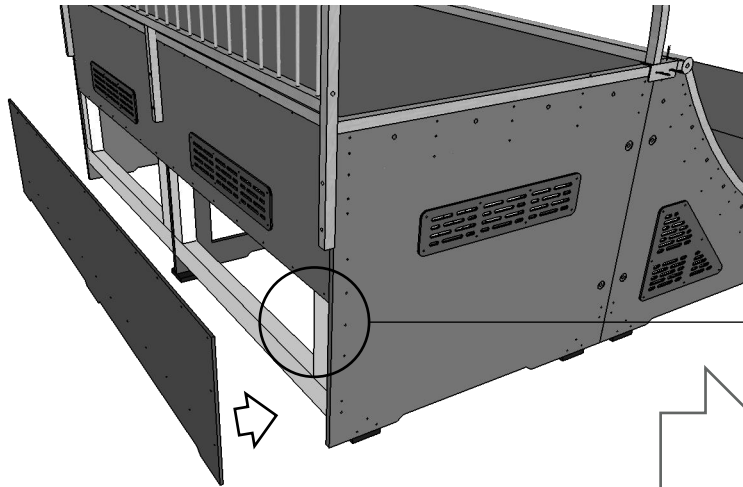

a. Mount Back Covers to back of MiniRamp.

b. Use 5x60 Torx screws to mount Back covers.

