



Installation Guide UBX-710T Chin up & Dips


Side View

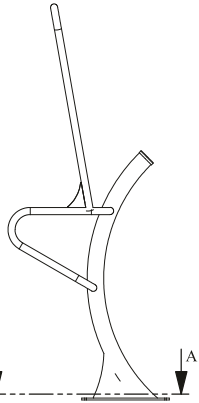


Top View

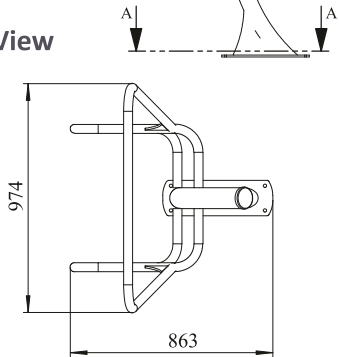


Front View

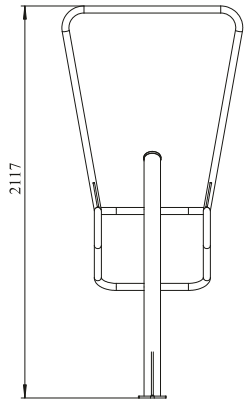


Surface installation
with anchor bolt

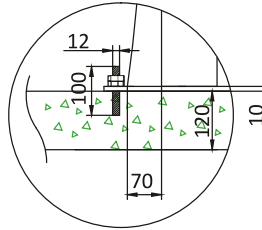



Inground footer
installation

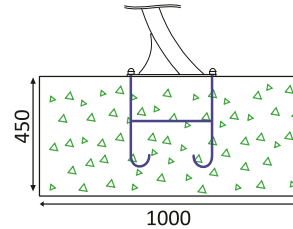


Block Installation:

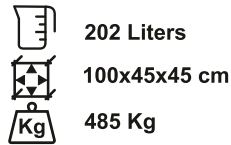

Base Plate Dimension

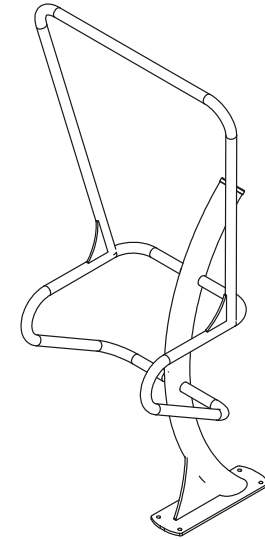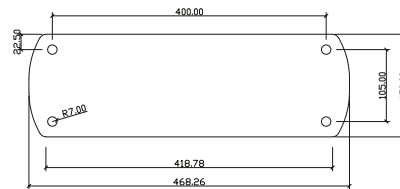

Standard Safety Area

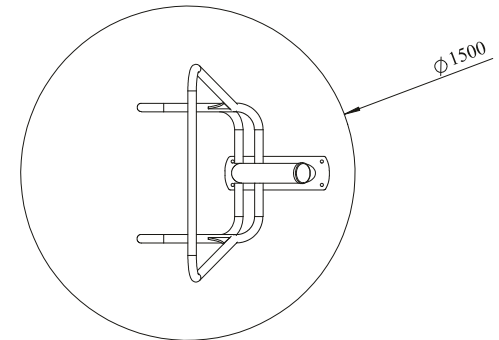

Installation instruction:

1. All units must be fully assembled and leveled before curing.
2. Body assembly screws must be attached using LocTite243.
3. Prevent access until concrete completely dry.
- *4. Footer is ordered separately