

Installation of Socket

Use installation bar to screw socket into ground.

Continue to screw in until top edge of socket is at ground level.



Removing the two inside reducing adapter. Insert three remain reducing adapter into socket.



Insert metal pipe

Fix in place by tightening screw.



Installation of Stepper

Use adhesive gun to apply 1-component PU adhesive cement (e.g. Ottocoll M 500) to pipe.

Apply adhesive cement to recess of stalk.




Install stepper on the metal pipe.



Allow at least 24 hours curing time before use.

The subbase must be even and stable compacted. If that in case of using loose filled shock absorption material not possible must be a concrete fundament in the dimension 260mm x 260mm x 560mm depth installed.

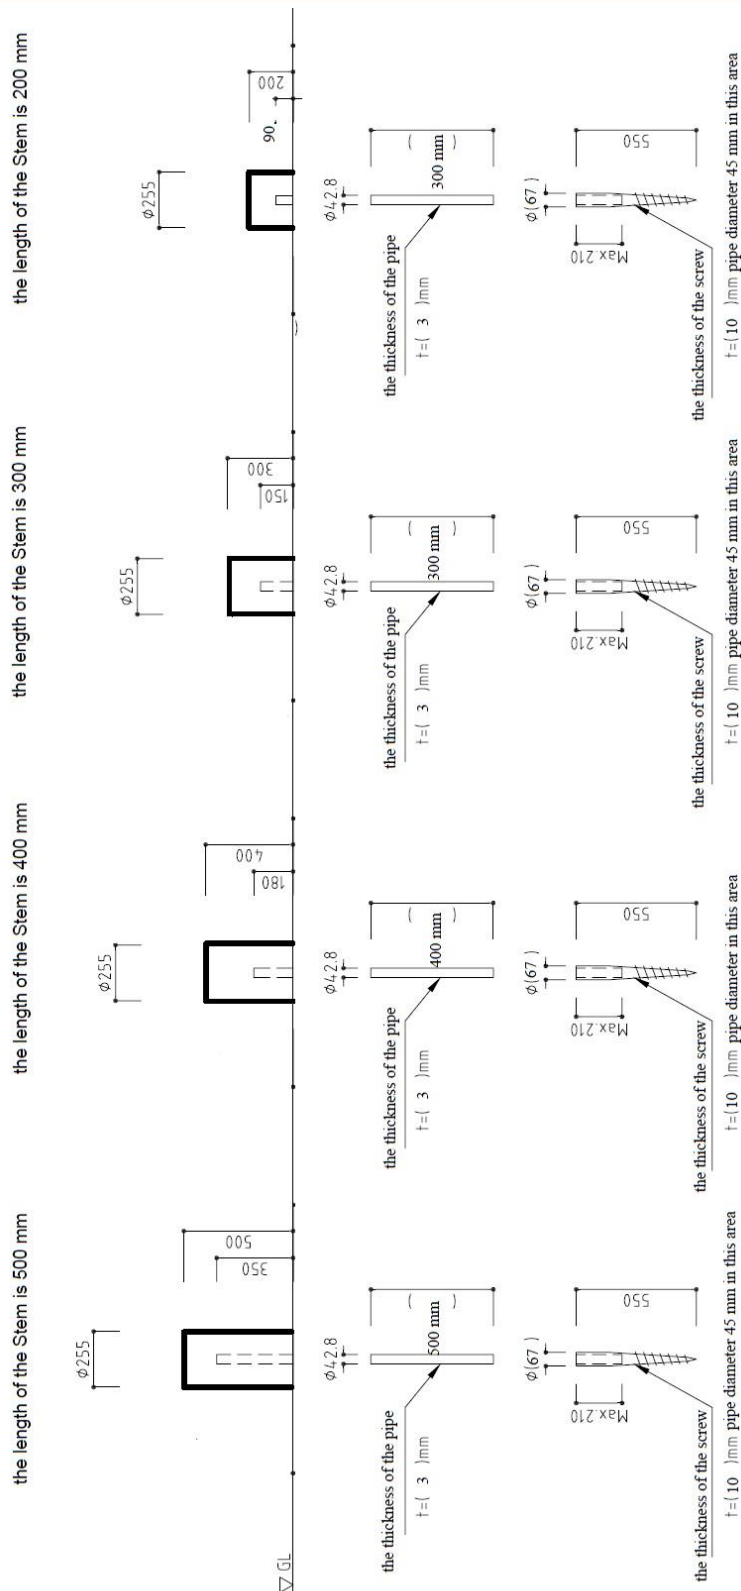

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 3 of 3